



Note: Connect Sensor shield to braided part of trigger cable.

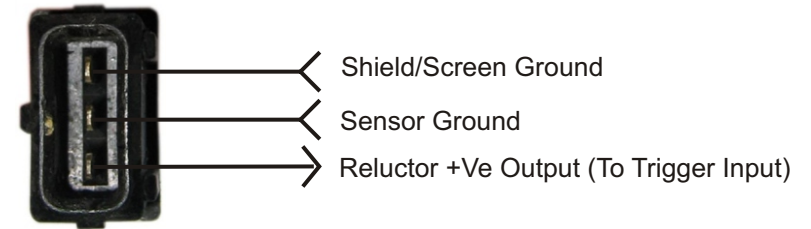


Figure C14.1 - 5 Cyl Audi Quattro Crank Angle Sensor

Figure C14.2 - 5 Cyl Audi Quattro Crank Angle Sensor