

# Link ECU Motorsport Compliance Tester

## Operation Instructions for Speedway New Zealand

1. Locate engine management Electronic Control Unit (ECU) in cockpit area of vehicle.
2. Ensure the ECU is disconnected from any other devices (e.g. PCLink or a DisplayLink).
3. Plug the tester into the ECU's port labelled 'CAN'.



**Connect tester here**

4. Press the grey button in the middle of the tester.
5. If a successful connection to the ECU is made, the following information will be displayed:
  - The ECU name
  - 'CONFORMS SPDWYNZ' or 'ILLEGAL ECU'
  - The firmware version and serial number
6. Disconnect the tester from the ECU. The device will turn itself off after several seconds.

Warning: Do not touch battery strap terminals when changing the battery.