


Component Pin-outs

Viewed looking into parts connectors (not wire-side connector)

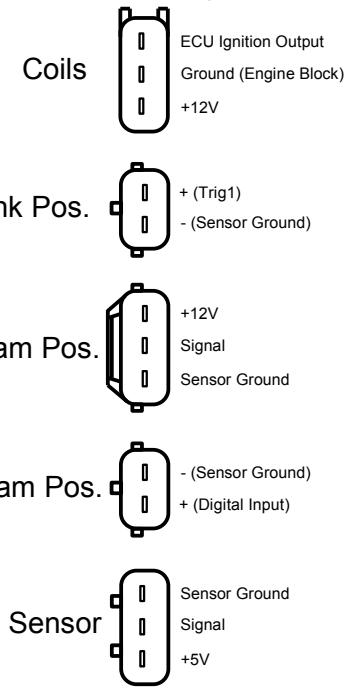

Notes:

- This diagram is intended to be used with the EJ20/25 dual/quad AVCS base maps (distributed with PCLink).
- Refer to Diagram G03 for ECU power and ground wiring.
- More than one main power relay may be required to feed solenoids/injectors, ignition etc... These relays should remove power to all solenoids when the ECU is shut down to prevent back feeding.
- It is recommended to fit one suppressor to coil positive on each bank.