



Notes:

- This diagram is intended to be used with the K20A base map (distributed with PCLink).
- Refer to Diagram G03 for ECU power and ground wiring.
- More than one main power relay may be required to feed solenoids/injectors, ignition etc... These relays should remove power to all solenoids when the ECU is shut down to prevent back feeding.

