



### Component Pin-outs

Viewed looking into parts connectors (not wire-side connector)

#### Accelerator Pedal

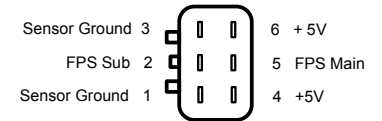

#### Throttle Body

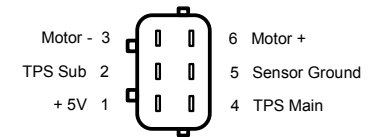

#### Notes:

- Motor + refers to the pin that has battery voltage applied to it to open the throttle.
- Refer to the appropriate ECU Wiring and Installation Manual for further wiring information.
- It is recommended to use shielded cables for TPS and FPS sensors.
- To prevent back feeding, the throttle motor relay must be controlled from a non flywheeled output such as a spare Ignition or Injection channel.