



Factory Igniter Labels

- IB1 = Ign1 In
- IB2 = Ign2 In
- IB3 = Ign3 In
- OC1 = Ign1 Out
- OC2 = Ign2 Out
- OC2 = Ign2 Out
- VB = 12V Key
- GND = Engine Block Ground



AUTHOR
**Mitsubishi GTO and FTO
Triggers and Ignition**

DATE
12/8/2009

VERSION
1.0

DRAWING ID
G28

AUTHOR
PW