



- ### Notes:
- This diagram is intended to be used with the EZ30 base map (distributed with PCLink).
 - Refer to Diagram G03 for ECU power and ground wiring.
 - More than one main power relay may be required to feed solenoids/injectors, ignition etc...
 - Fit one suppressor to coil positive on each bank.

